

VemsTune Wheelspeed flexfuel setup

Notebook: VEMS Documentation

Created: 10/14/2015 3:37 PM

Updated: 2/4/2016 9:11 PM

Author: Jason Russell

Go to where VemsTune is installed, for instance:

C:\Program Files (x86)\VemsTune-2015-04-04\config

Edit the .ini file for your firmware version, for instance:

vemsTune-v3-1.2.31.ini


Search for "roadSpeed" until you hit the section below



```
roadSpeed = {0}  
#else  
roadSpeed = {speed}  
#endif
```

and change it to:

```
roadSpeed = {0}  
flexfuel = {- 50}  
#else  
roadSpeed = {speed}  
flexfuel = {speed - 50}  
#endif
```


Then save the file, start VemsTune, and you can edit the gauge.

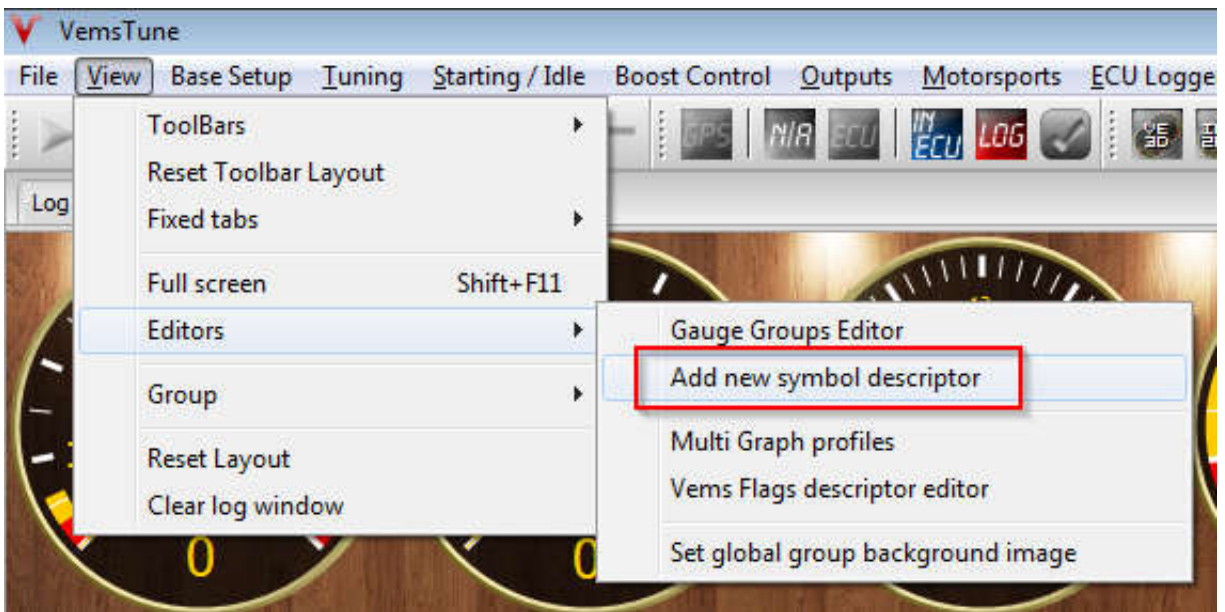

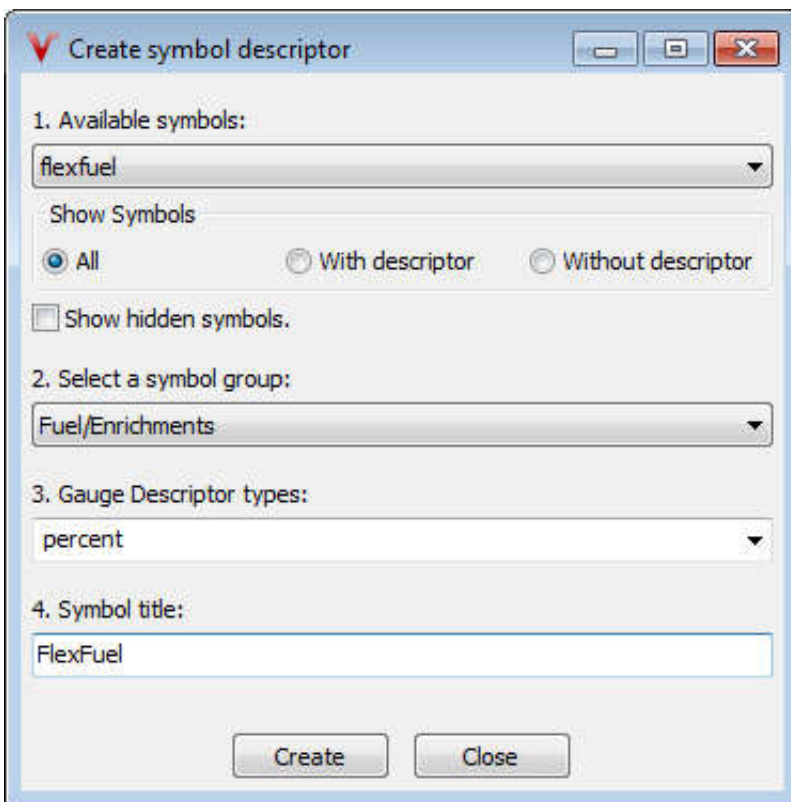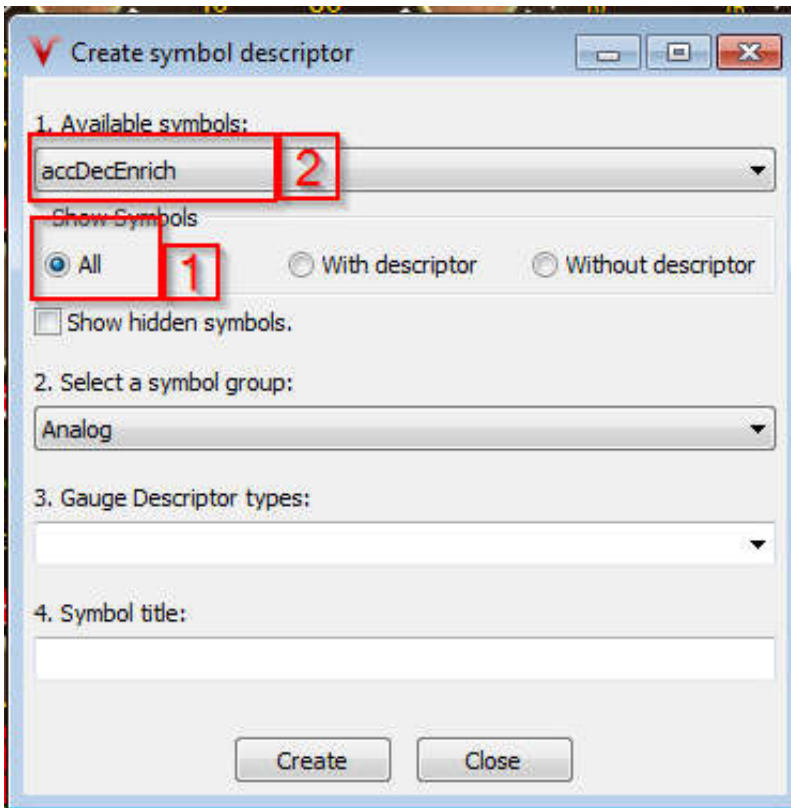

Click Create. Then Ok, Then close VemsTune and re-open it.

Once you start up again, you can right click on a gauge, select Change gauge data, Fuel/Enrichments, then FlexFuel

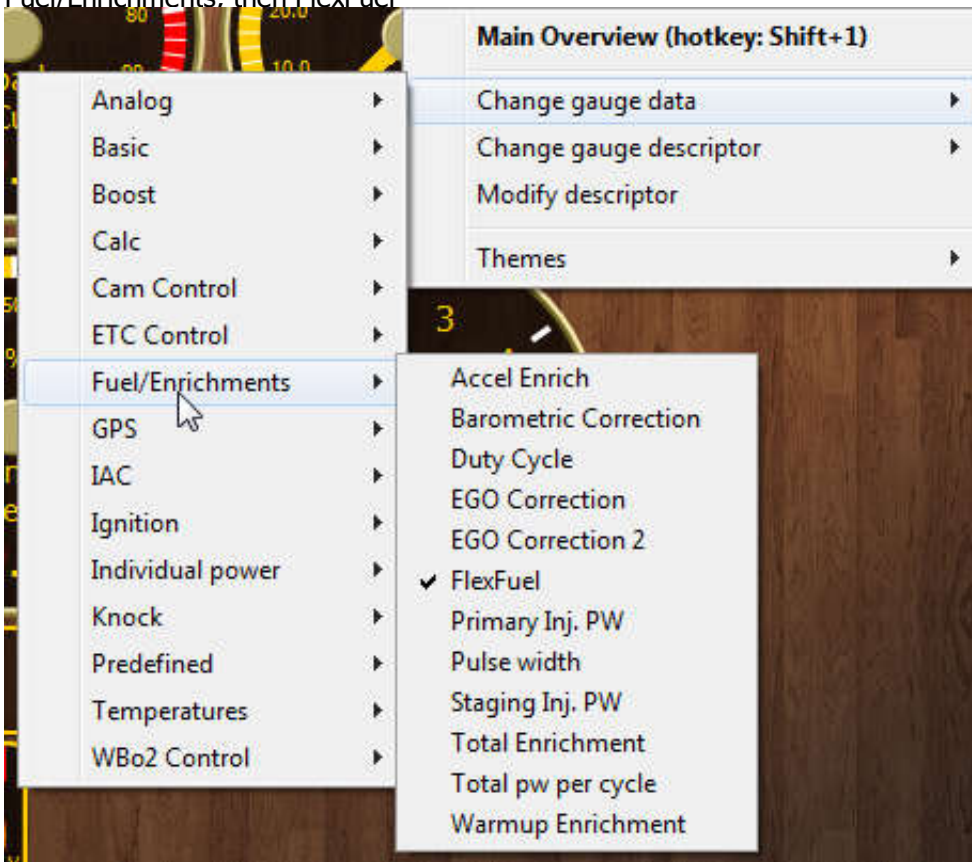

This is how it should look with the sensor disconnected



when you connect the sensor, it should say 0 there if there is no ethanol in there. it showed 5-10% ethanol in our 93oct